





Mounting instructions for **ProFresnelSpot** barn-door

Item # 10.07.07

Roller set kit consists of:

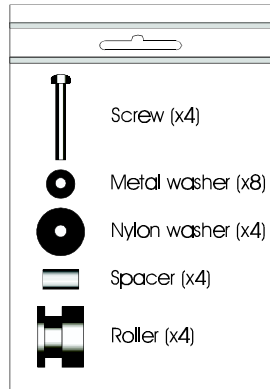

1) Place the Fresnel-spot with the lens facing upwards on a sturdy surface

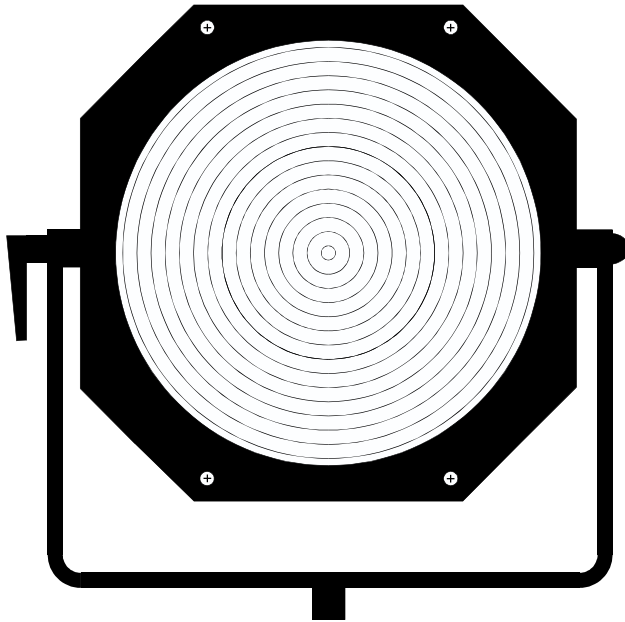


2) Remove the four screws on the front of the fresnel-spot

3) Assemble 3 roller sets in order as shown below



and fasten them on the front of the Fresnel-spot

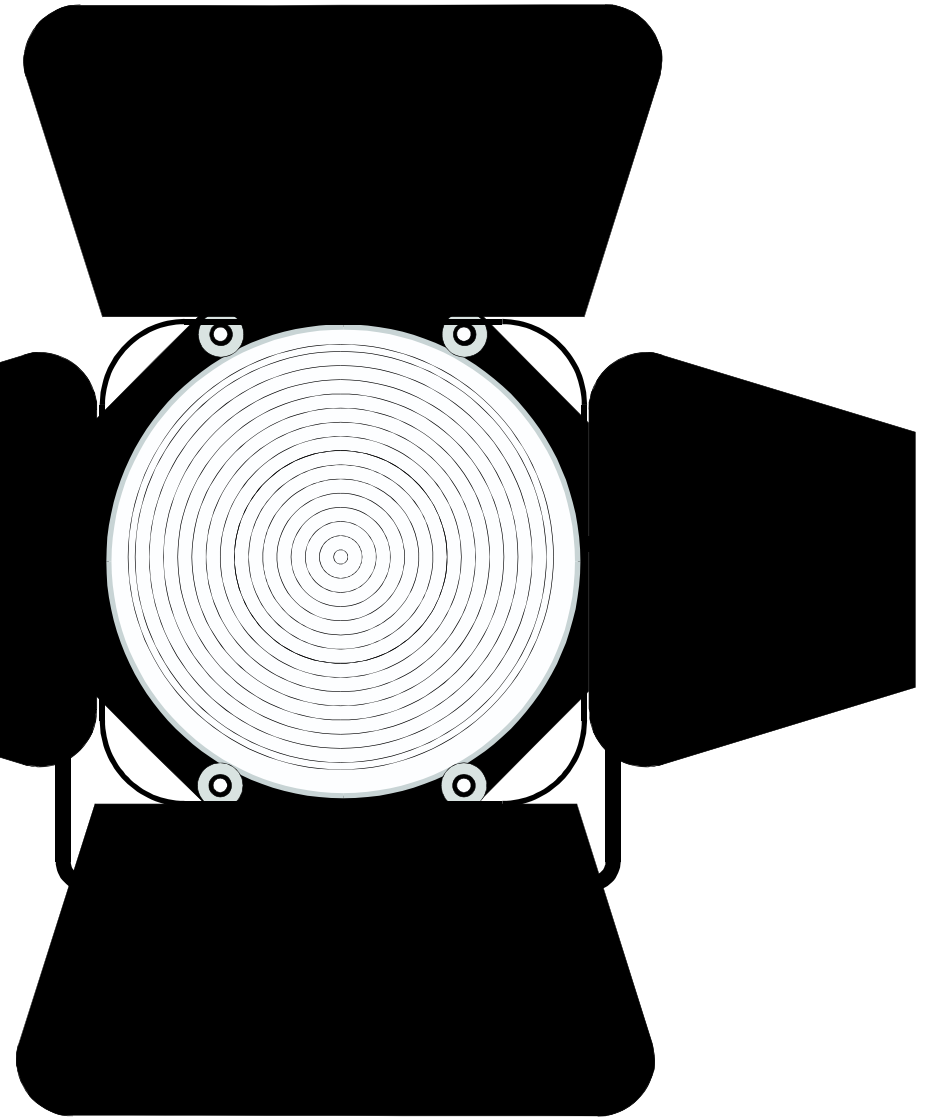

4) Snap the barn-door into place, assemble and fasten the remaining roller set